

MOBILE/PC nemonic user manual (v1.1)



nemonic:

Contents

How to install the mobile app	4
--	---

How to use the Android app

• Precautions before use	6
• Entering & printing memos	7
• Printer template settings - How to set up in My Memos	9
• Printer template settings - How to set up in Detailed View	10
• Printer template settings - How to set up in Template	11
• Password Settings	12
• What to do if [Response timeout.] appears	13

How to use the iOS app

• Precautions before use	15
• Entering & printing memos	16
• Printer template settings - How to set up in My Memos	18
• Printer template settings - How to set up in Detailed View	19
• Printer template settings – How to set up in Template	20
• What to do if printer communication is unavailable -1	21
• What to do if printer communication is unavailable -2	22

PC program installation guide	24
--	----

How to use the PC program

• Precautions before use	28
• Entering & printing memos	29
• Detail entering & printing deep memos	30
• Default mode	32
• Detail mode	33
• How to capture screens	34
• How to delete a memo & change the name of a memo	35
• Printer template settings – How to set up in My Memos	36
• Printer template settings – How to set up in Template	37
• How to print using another program (ex: Microsoft Powerpoint, Word) -1	38
• How to print using another program (ex: Microsoft Powerpoint, Word) -2	39

FAQ

• FAQ	40
-------------	----


How to install the mobile app

MEMORIC:

How to install the mobile app


For Android Users

Search **nemonic** on Google Play Store & install
(Supported on Android 5.0 (Lollipop) and above)

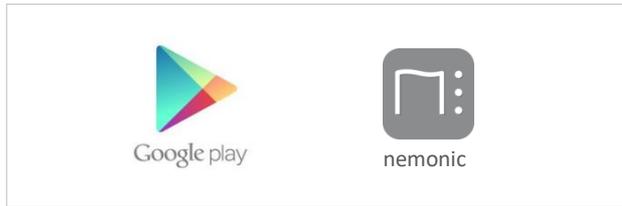

For iOS Users

Search **nemonic** on App Store & install
(Supported on iOS 9.0 (iPhone5) and above)

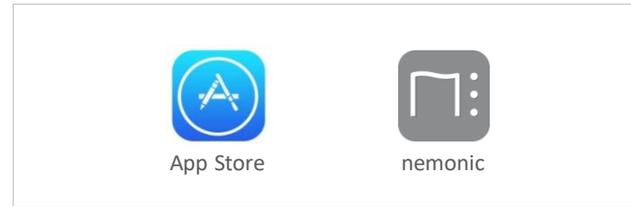


How to use the Android app

MEMONIC:

Precautions before use


In order to link nemonic and the app...

Please activate **Bluetooth** before using the app.

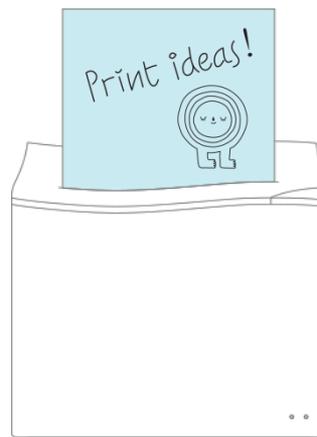

How to use the Android app

Entering & printing memos

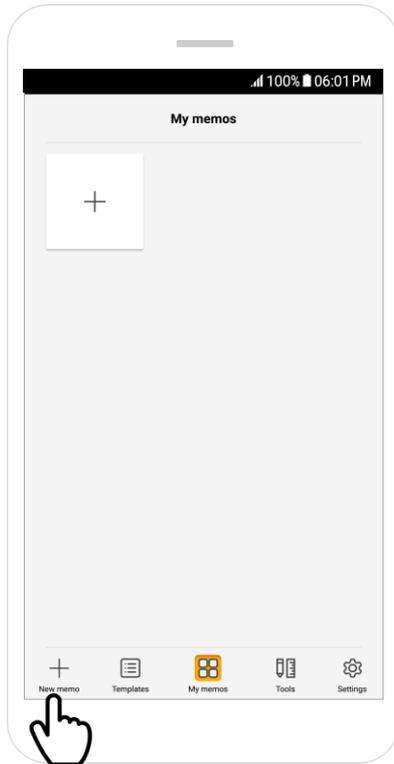


Icon description

-  Change memo size
-  Enter draw mode
-  Enter erase mode
-  Input text
-  Import image
-  Enter camera mode
-  Initialize memo
-
-  Save memo
-  Rotate sticky side
-  Select a printer
-  Print memo


- Run the app, click the **+** **New memo** button on the bottom left and enter the memo

Entering & printing memos

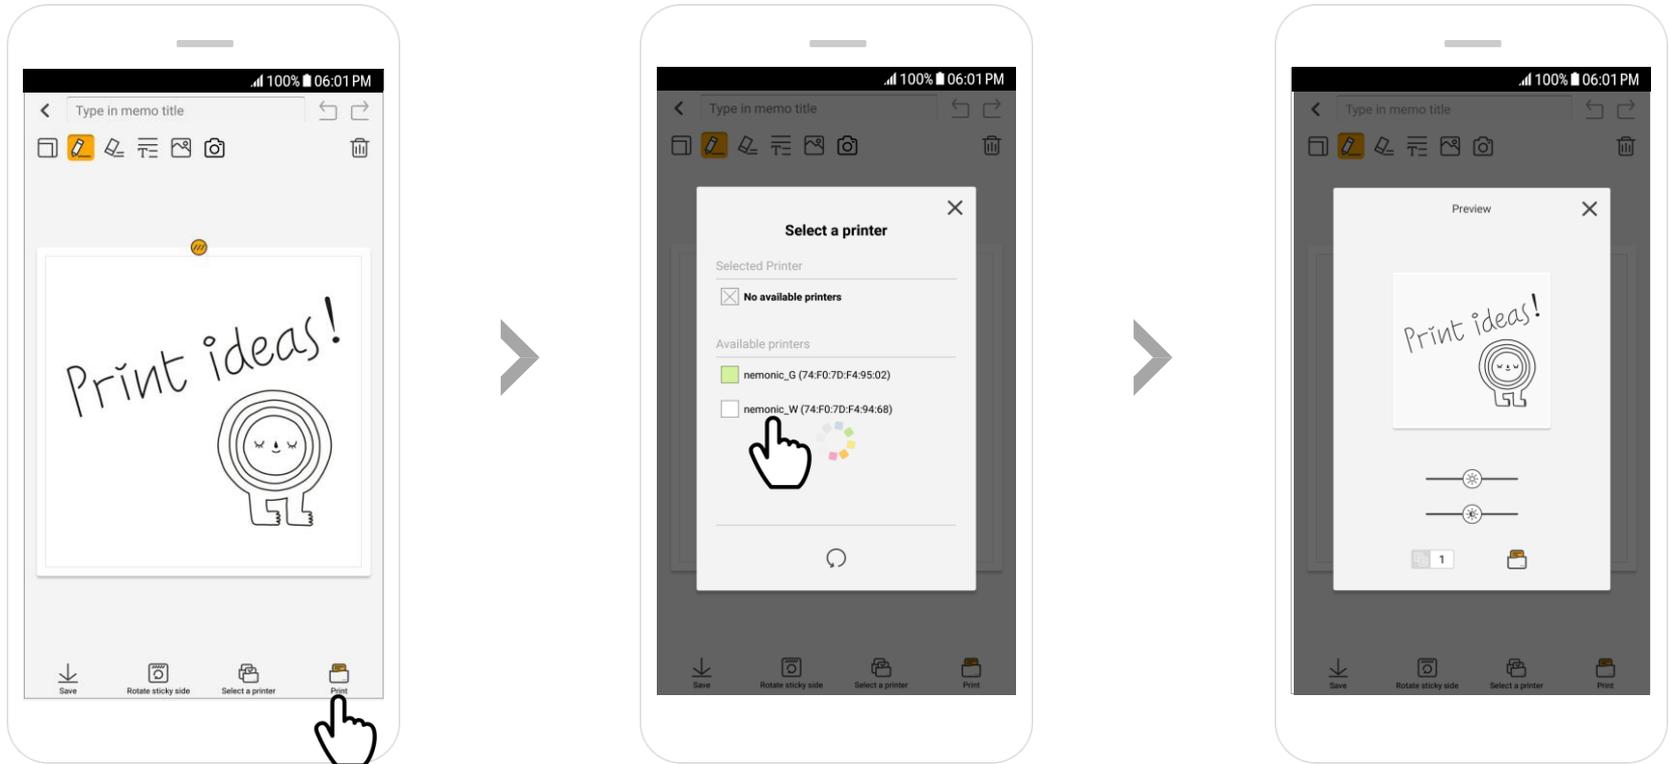


- 1 Click the  **Print** button on the bottom right
- 2 If multiple printers are found, a window for printer selection will appear where you can select the desired printer
- 3 Click the  **Print** button on the bottom right of the preview screen
- 4 After initial printing, subsequent printing is automatically performed on the previously selected printer

Printer template settings - How to set up in My memos

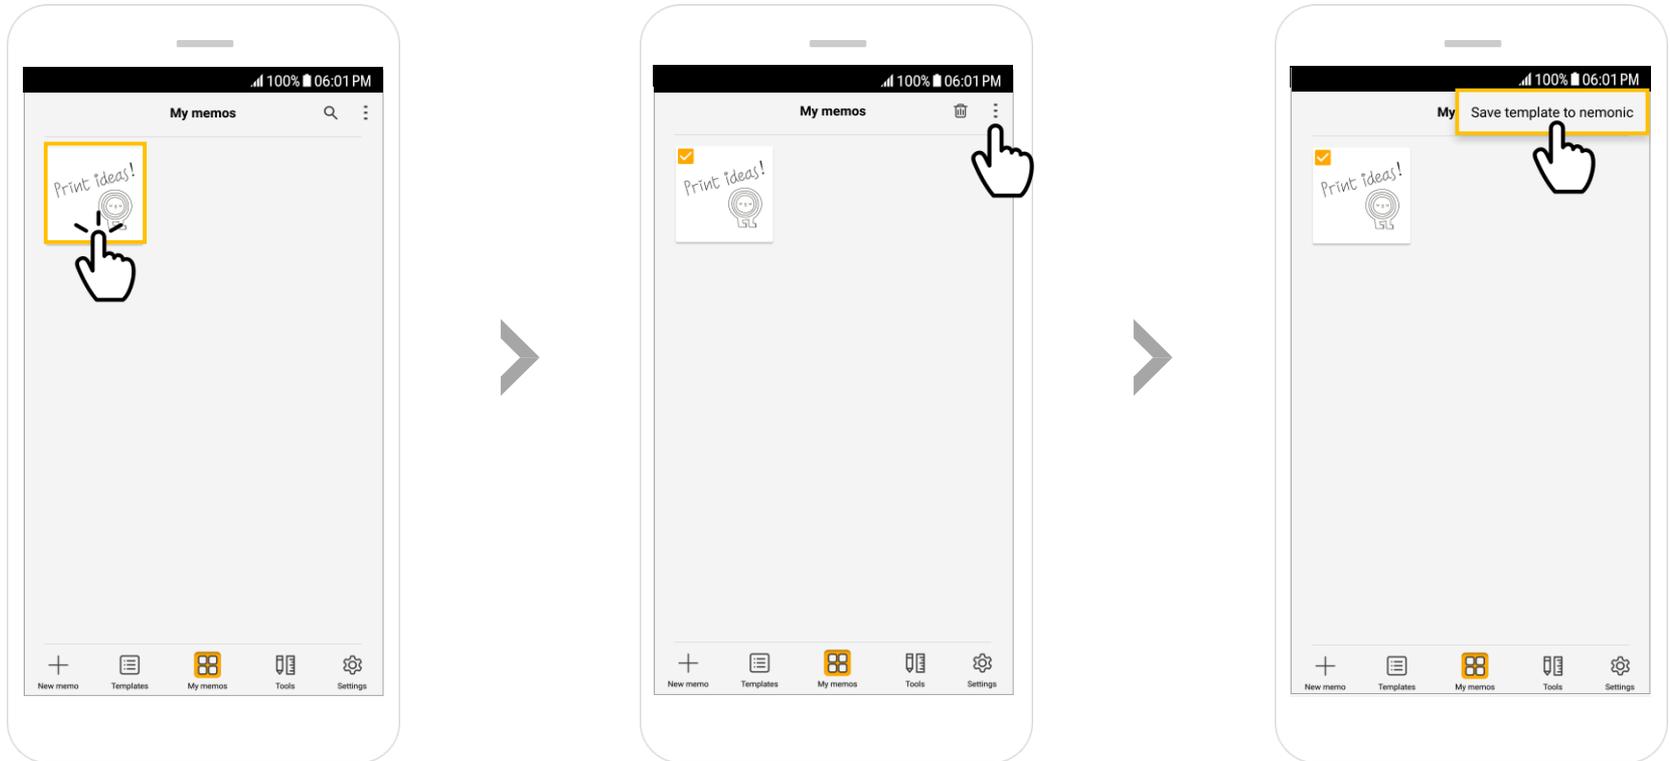


- 1  Press & hold the memo to save as printer template on **My memos**
- 2 A checkbox will appear; Click the **:** button on the top right
- 3 Click **Save template to nemonic**

Printer template settings - How to set up in Detailed View

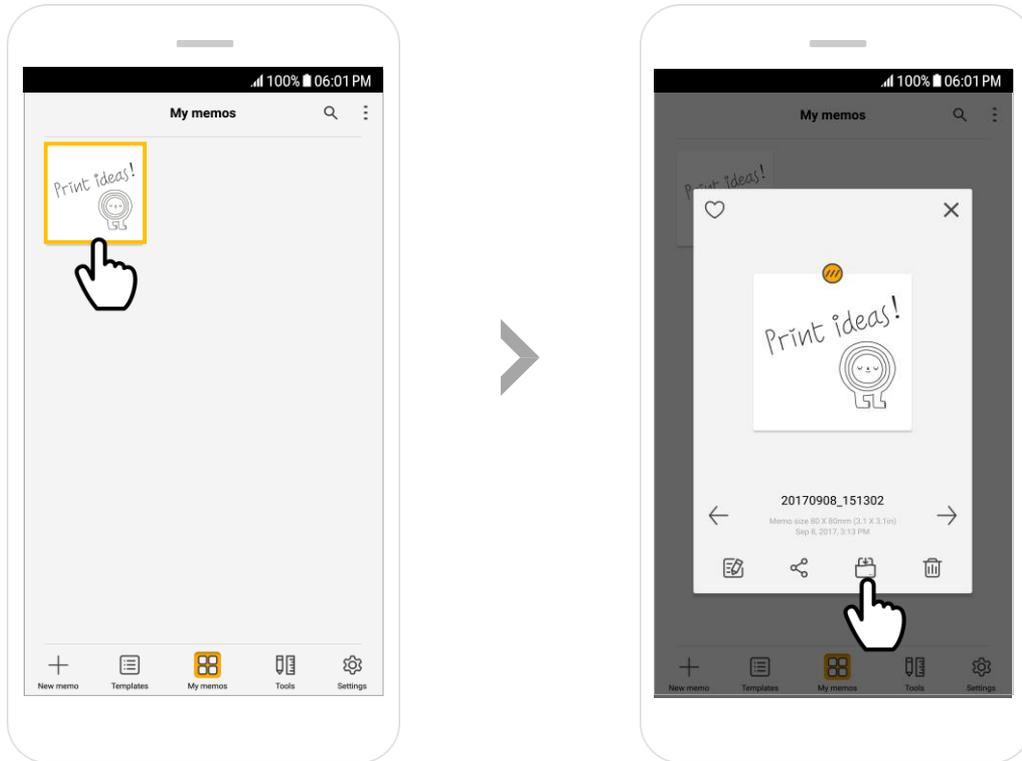


- 1 Select the desired memo to save as printer template
- 2 Click  **Save template to nemonic** at the bottom of detailed view

Printer template settings - How to set up in Templates

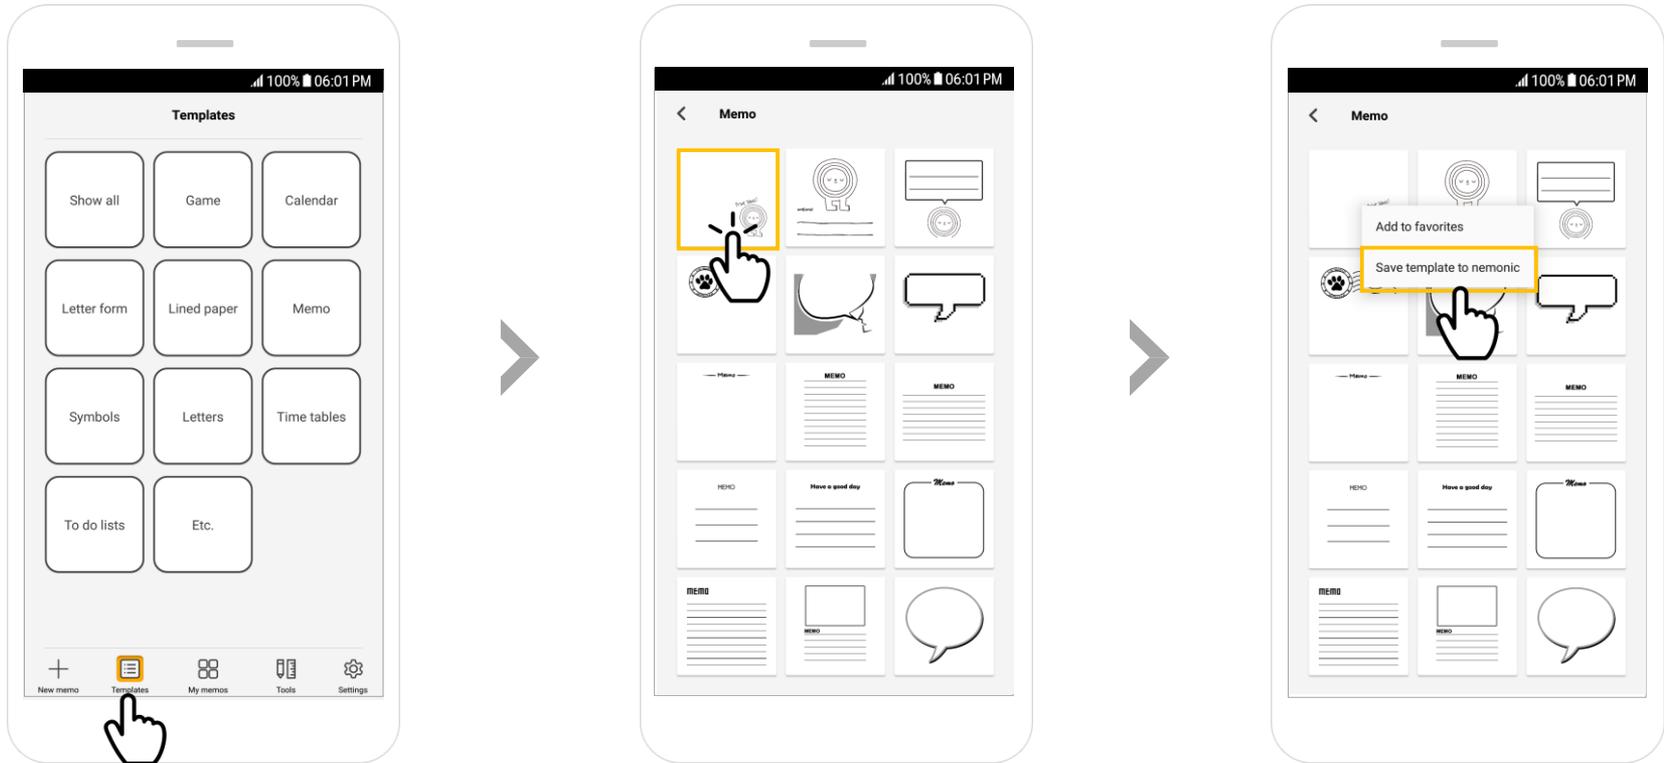


- 1 Click the  **Templates** button on the bottom
- 2 Press & hold the template to save as printer template
- 3 Click **Save template to nemonic**

Password Settings

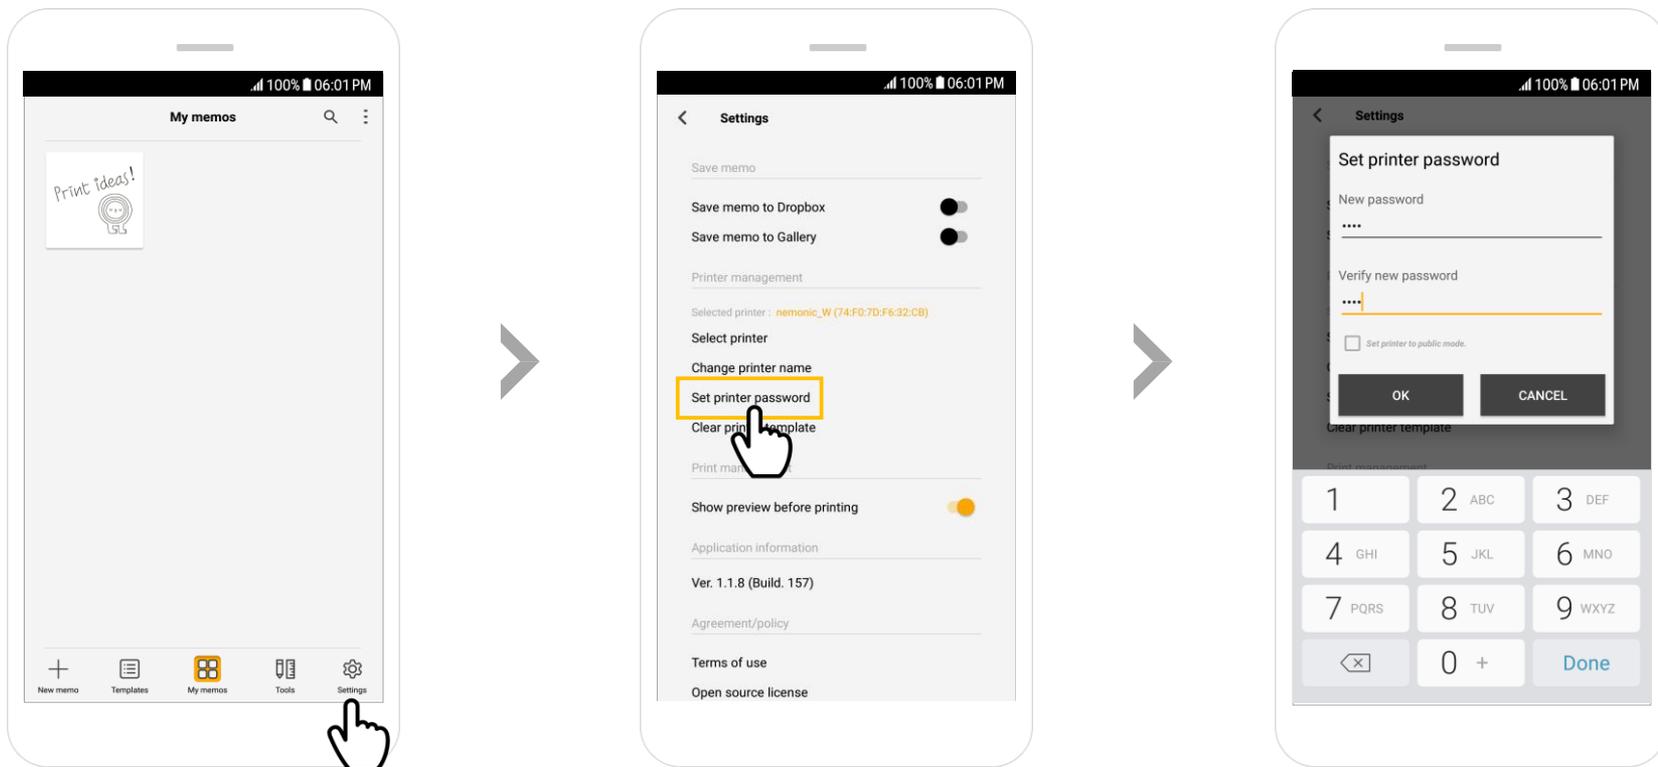

- 1 Click the  **Settings** button on the bottom right.
- 2 Click **Set printer password** in the settings window.
- 3 Enter password (4 digits), enter the same password again in the 'Verify password' box and press **OK**
(If you want to disable password, check the 'Set printer to public mode' checkbox and press OK.)

What to do if **Response time out.** appears

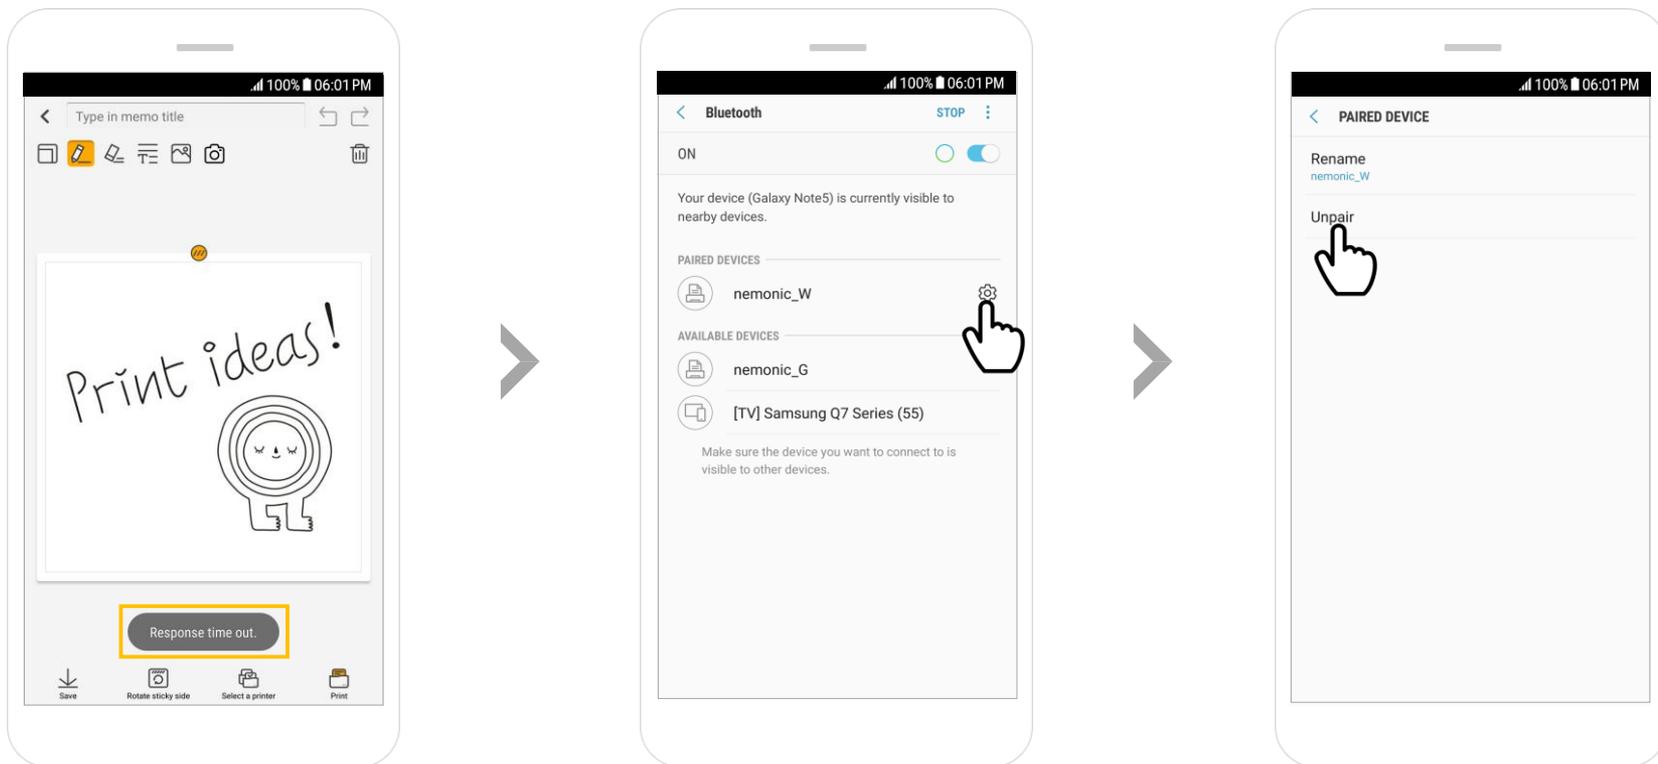

- If the '**Response time out.**' appears continuously, refer to the below and delete existing printer history
- 1 Check if the selected printer is powered on
- 2 Check again after turning the power of printer or Bluetooth off & on
- 3 If the message still appears, unpair the paired nemonic on the **Settings > Connection > Bluetooth** menu of the Android device & try again



How to use the iOS app

MEMORIC:


Precautions before use

In order to link nemonic and the app...

Please activate **Bluetooth** before using the app

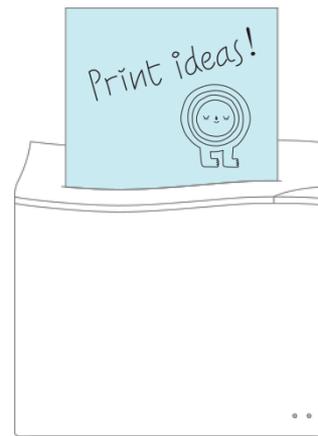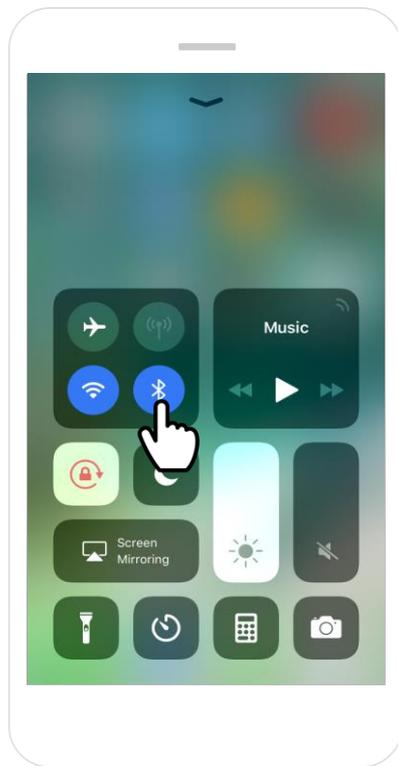

Entering & printing memos

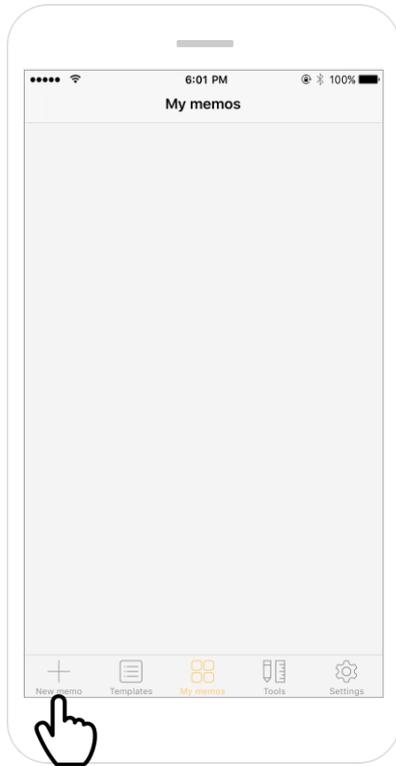


Icon description

-  Change memo size
-  Enter draw mode
-  Enter erase mode
-  Input text
-  Import image
-  Enter camera mode
-  Initialize memo

-  Save memo
-  Change sticky side
-  Select a printer
-  Print memo


- Run the app, click the  **New memo** button on the bottom left and enter memos

Entering & printing memos

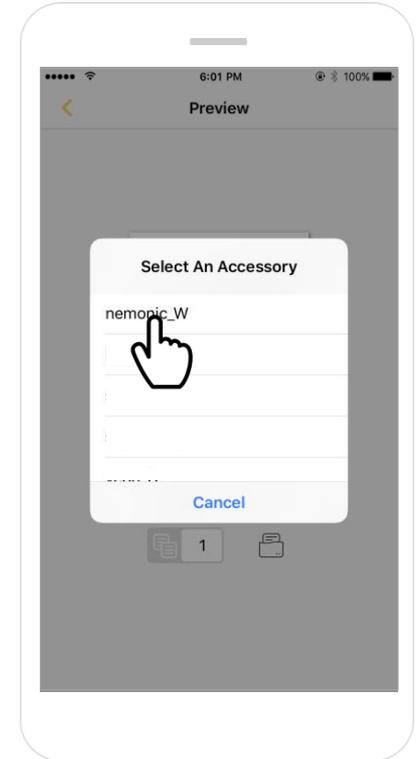


- 1 Click the  **Print** button on the bottom right
- 2 At Preview, click the  **Print** button
- 3 If no previous printing history exists, the '**Select An Accessory**' pop-up appears where you can select the printer to use
- 4 On the next printout, the previously selected printer will be used automatically

Printer template settings - How to set up in My memos

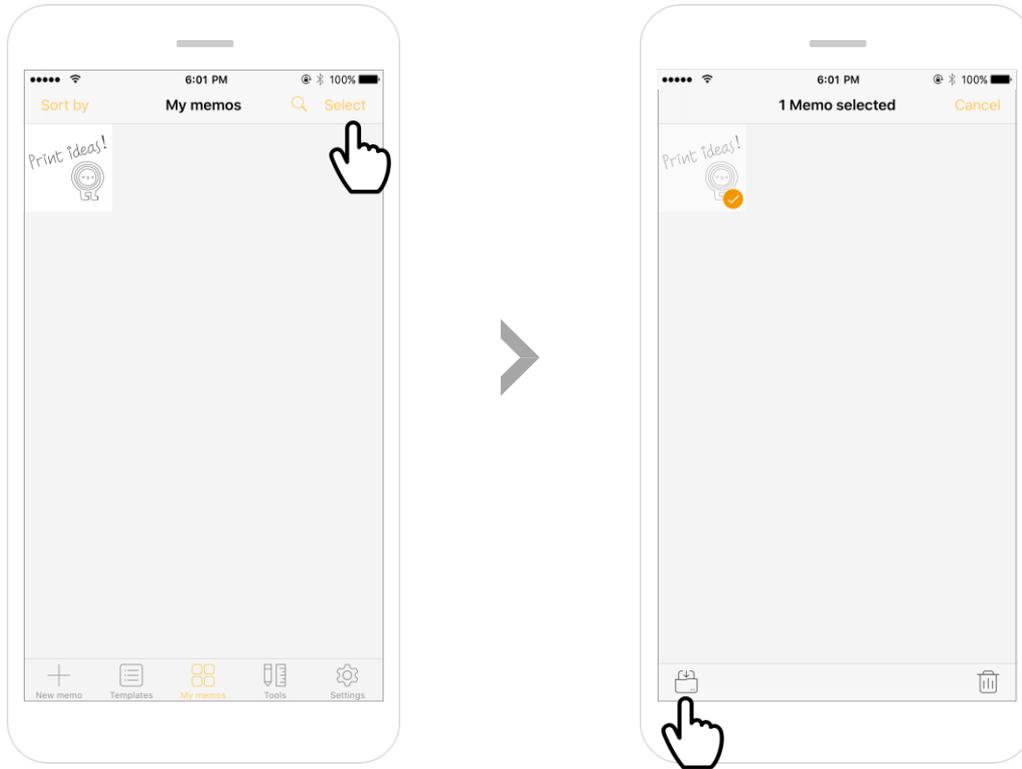

- 1 Press the **Select** button on the top right & select the memo to save as printer template (1memo)
- 2 Click the  **Save template to nemonic** on the bottom left

Printer template settings - How to set up in Detailed View

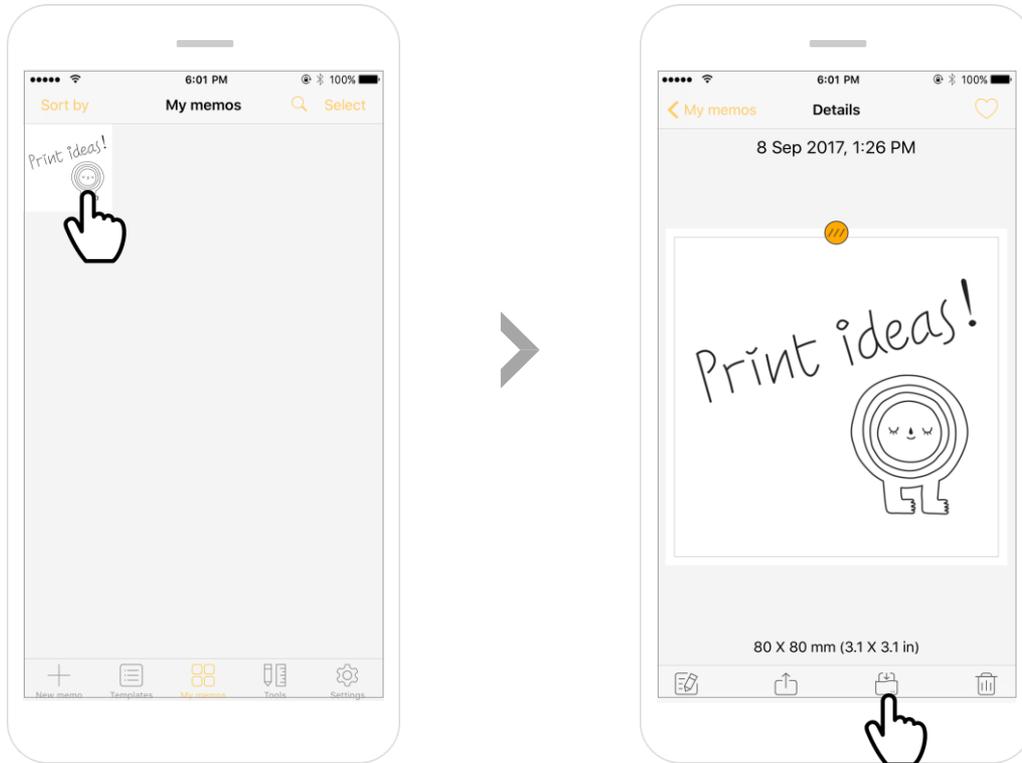


- 1 Select the desired memo to save as printer template
- 2 Click  **Save template to nemonic**

Printer template settings - How to set up in Templates




- 1 Press the  **Templates** button on the bottom & select category
- 2 Press the **Select** button on the top right & select the template to save as printer template (1template)
- 3 Click the  **Save template to nemonic** on the bottom left

What to do if printer communication is unavailable -1

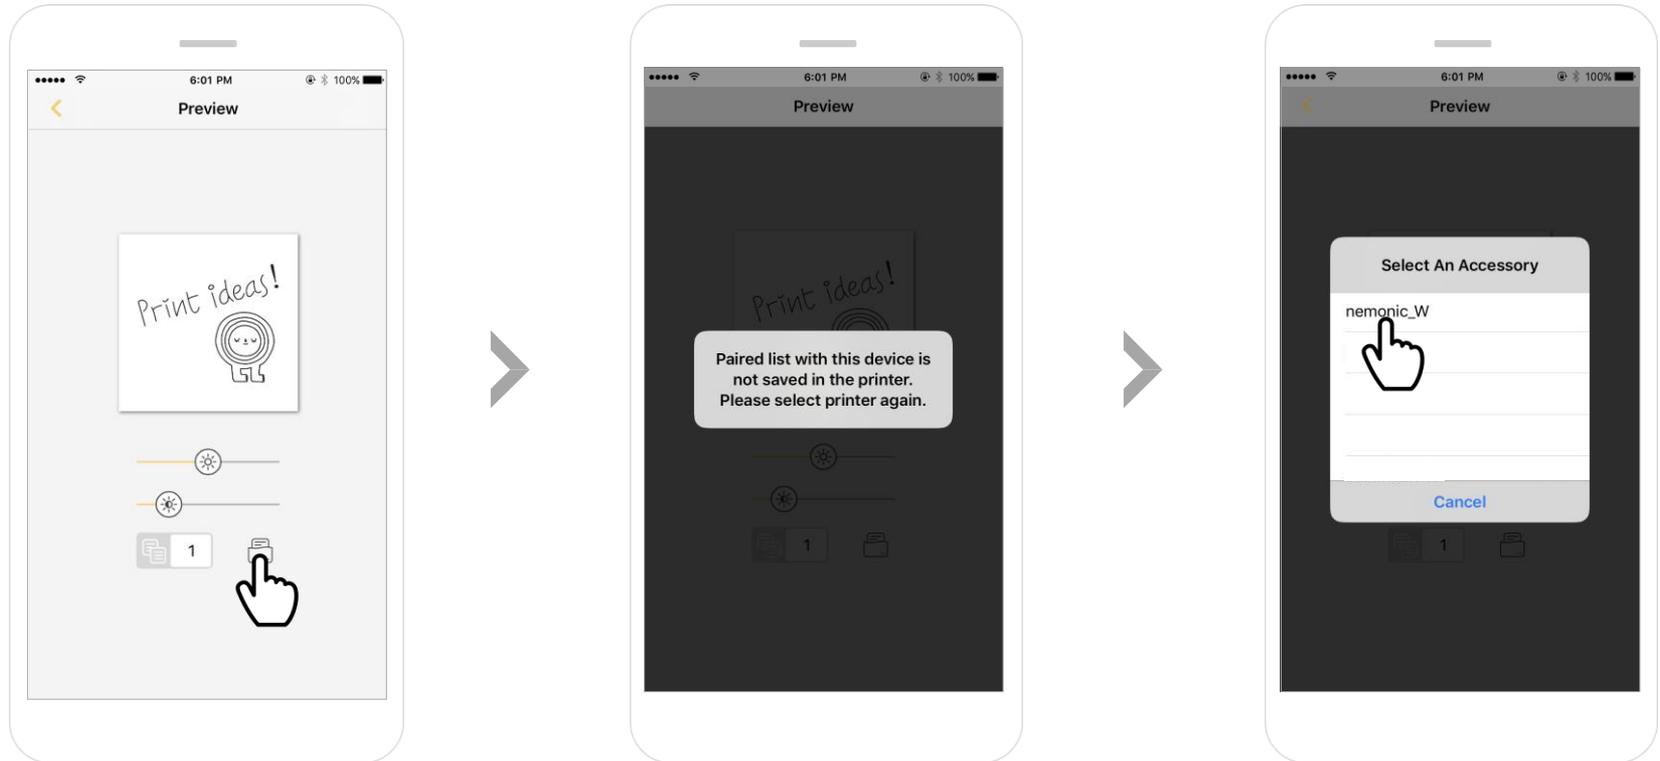

- When you connect nemonic to a new printer, printing will be performed after re-selecting the new printer since there is no connection history
- If connection continues to fail after re-selecting the new printer, refer to page 22 to set and reconnect

What to do if printer communication is unavailable -2

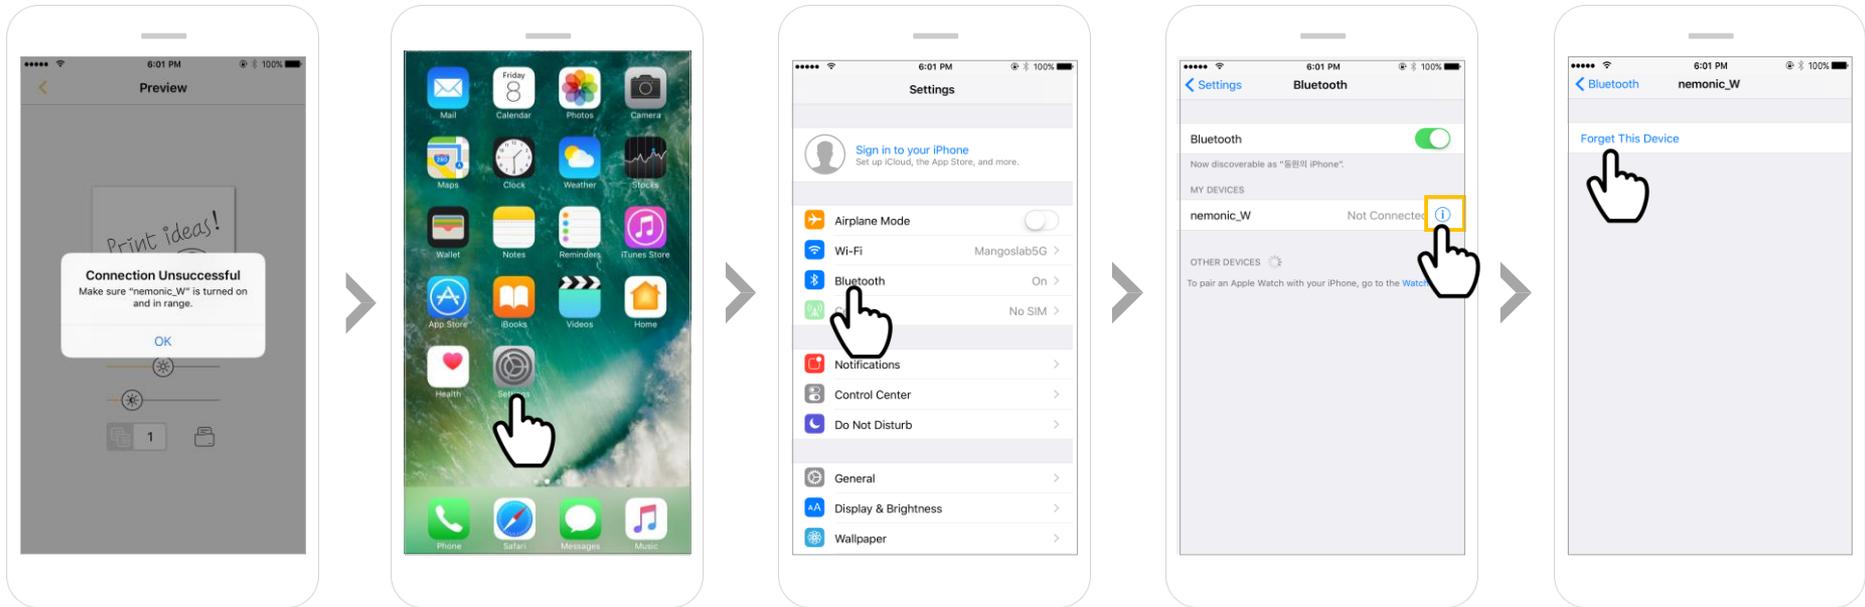


- If you re-selected the new printer on the previous process, but still see '**Make sure nemonic is turned on, in range.**', refer to the below and delete previous printer history
- 1 Go to **Home > Settings > Bluetooth**
- 2 Remove the printer with previous connection history from the list (Click **Forget This Device**)
- 3 Retry printing on the nemonic app after removing the printer

PC program installation guide


MEMORIC:

How to install-1/3

Download & install the PC driver for Windows on the nemonic download page(<http://www.mangoslab.com/download>)

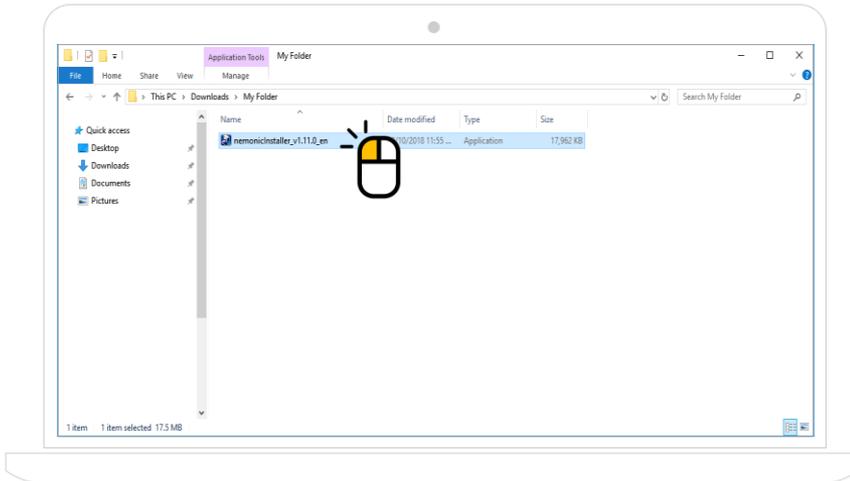


1 Run the downloaded installation file

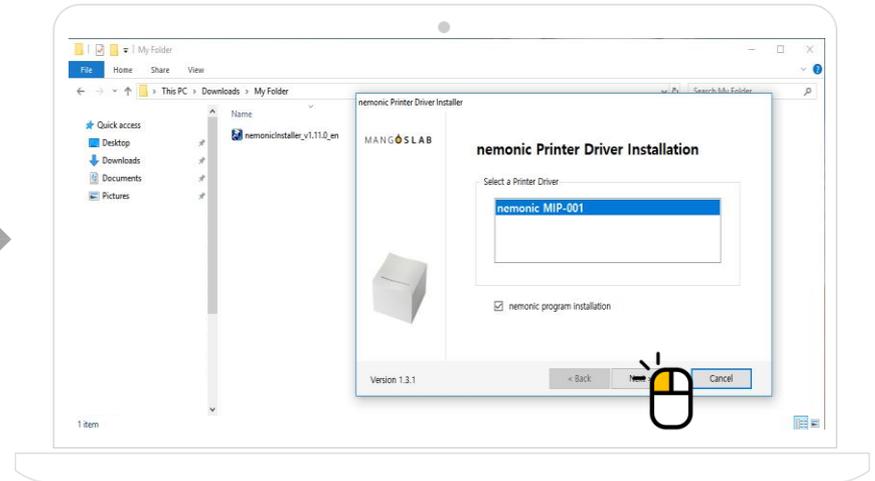


2 'nemonic program installation' Check

3 Select nemonic MIP-001 and click the 'Next' button

How to install-2/3

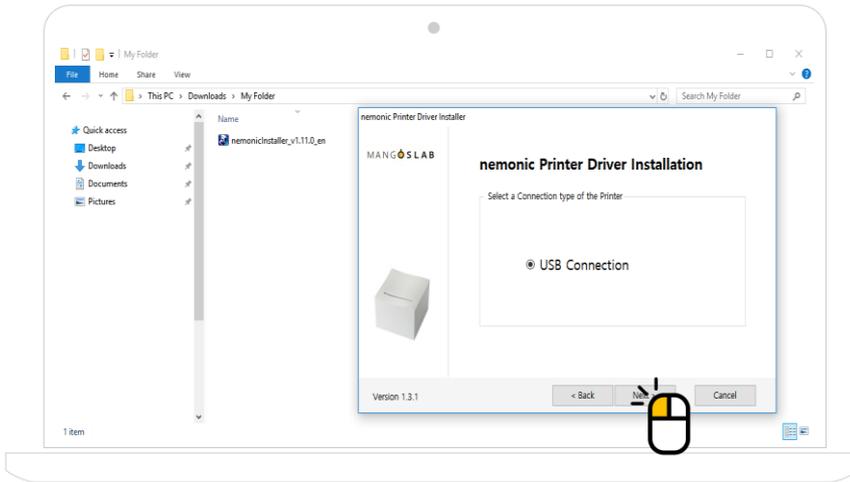


1 Select USB connection and click the **'Next'** button

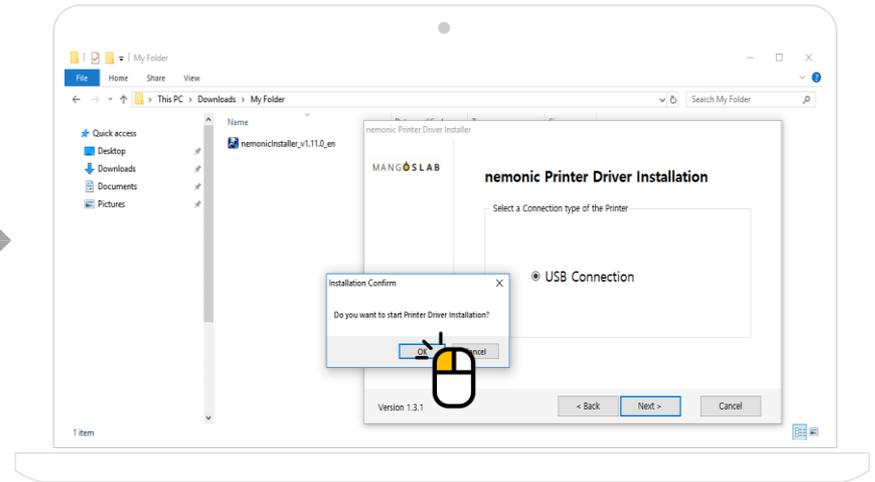


2 Start installation by clicking the **'OK'** button

How to install-3/3

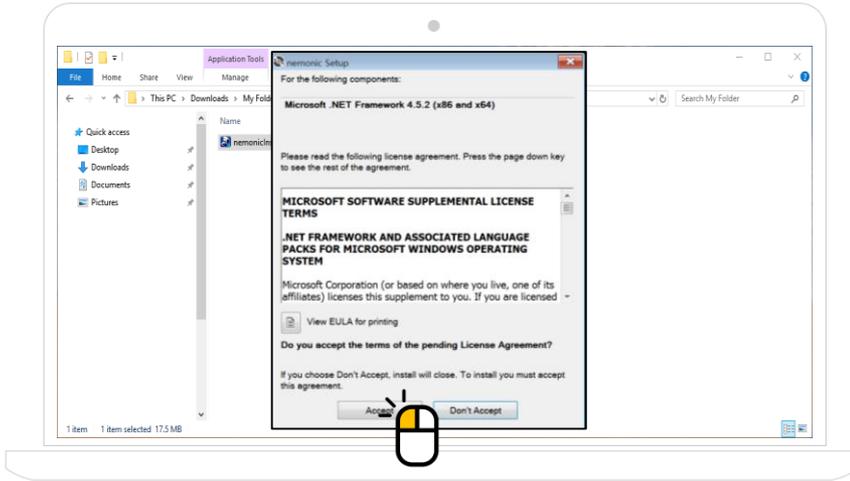

- 1 Some PCs may display the above screen during installation, which is the installation screen for the software required for running the nemonic program. Make sure you select '**Accept**'.

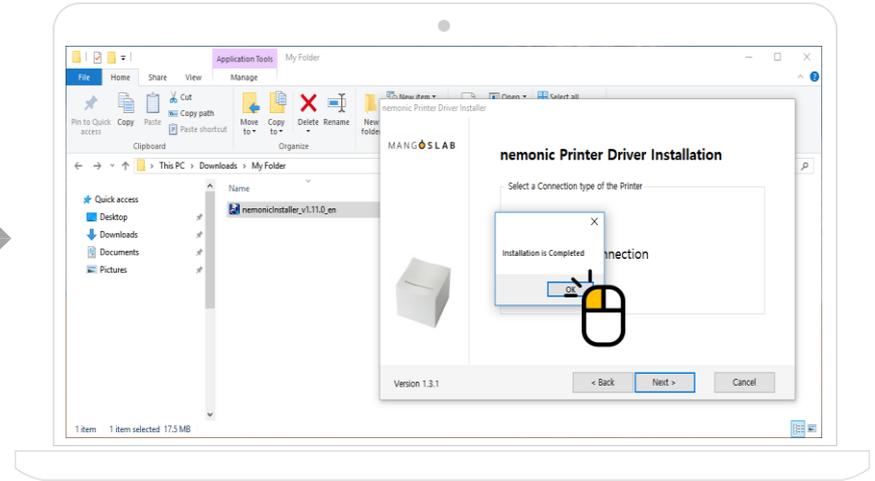


- 2 Click the '**OK**' button when the "Installation is Completed" message appears

How to use the PC program

MEMORIC:

Precautions before use


In order to print memo through the nemonic printer,
Turn on the nemonic printer and connect it to the PC via **USB**.

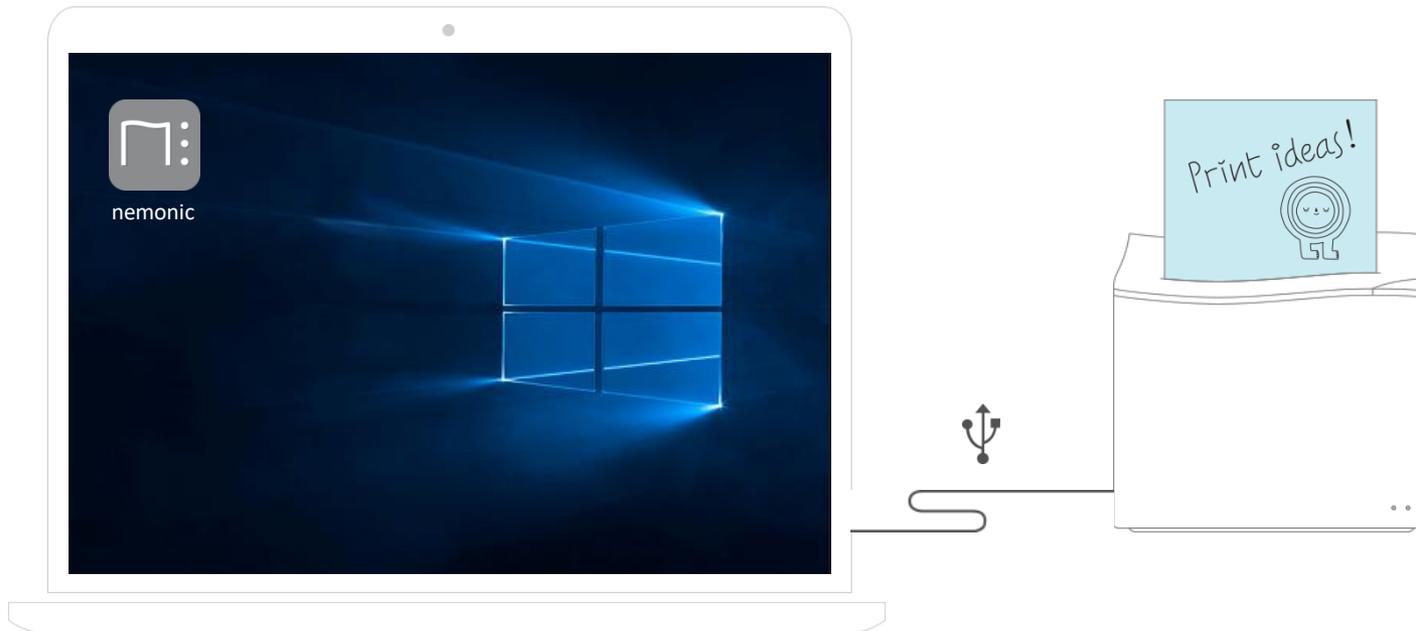

How to use the PC program

Entering & printing memos

Double-click the nemonic icon created on the desktop in order to run the application

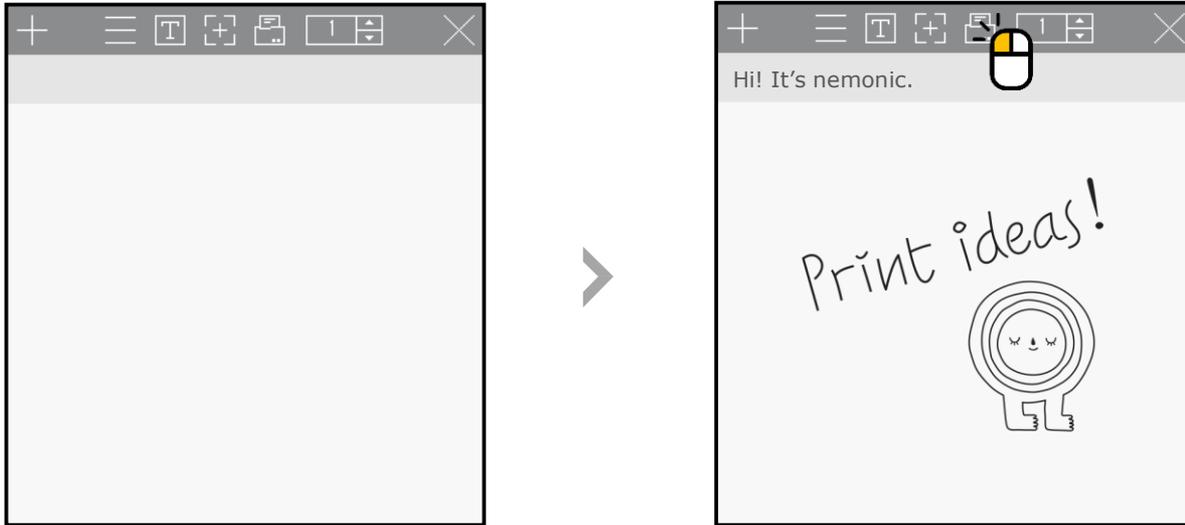


- 1 Run the nemonic application and type text.
 - 2 Click the  **Print memo** icon on the menu bar in order to print
- Also, you can add an image (drag & drop)

How to use the PC program



Detail entering & printing deep memos

Drag the text you want to format and right click.

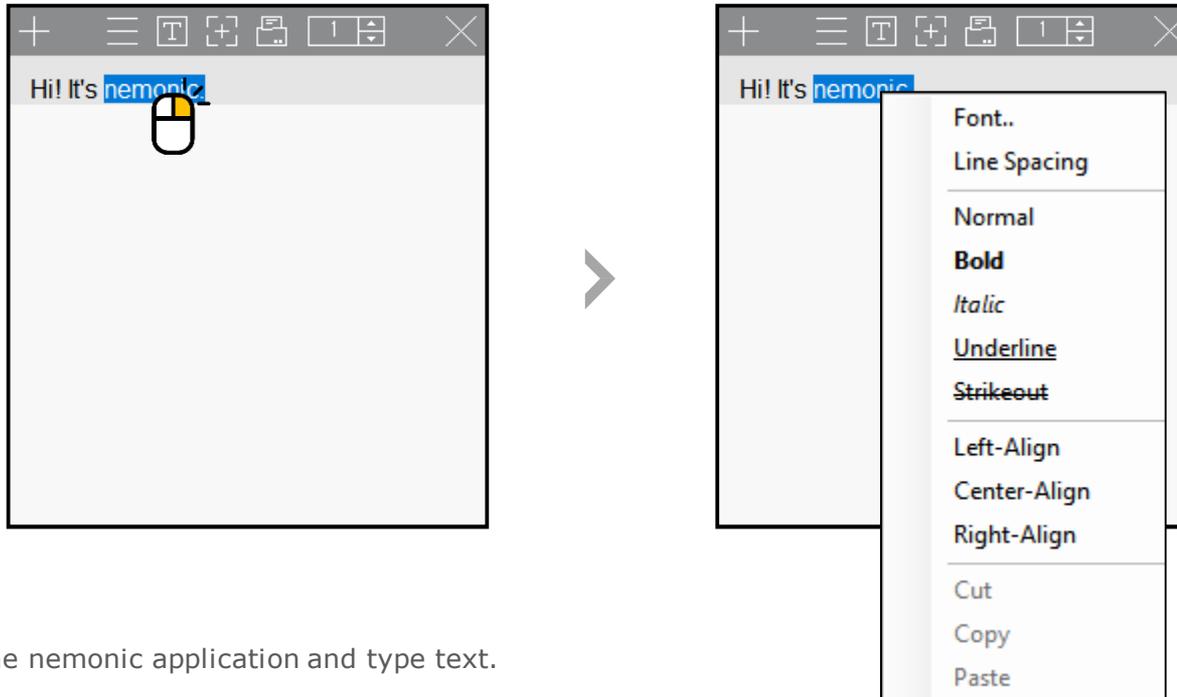

- 1 Run the nemonic application and type text.
- 2 Drag the text you want to apply and right click.


Detail entering & printing deep memos

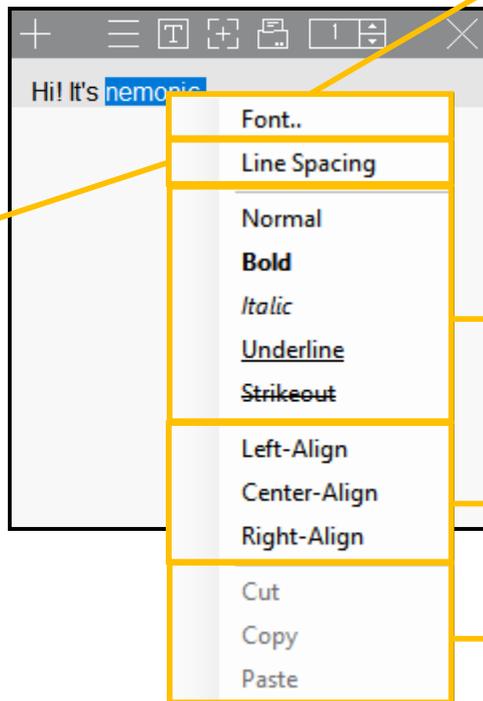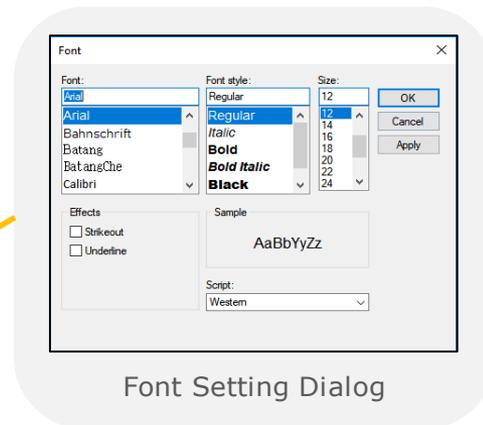

Font Style Change

Text Align


Edit Memo

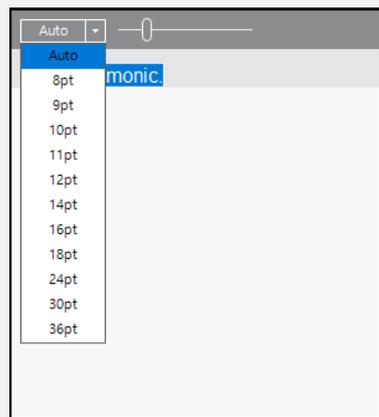

Line Spacing Menu

(You can select the combo box or enter it directly, but it's also possible to apply intervals by moving the slide bar)

Default mode

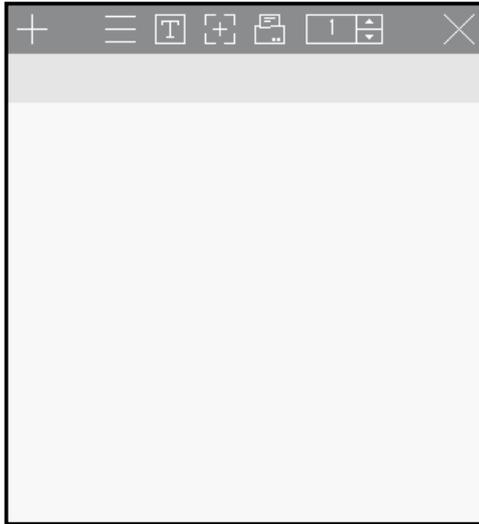


- This is the initial start screen of the nemonic app, you can edit text right away by typing. In default mode, you can input text, make screen captures, and print memos.

Icon description

	Create new memo
	Open detail menu
	Change editing mode (options: image / text)
	Enter screen capture mode
	Print current memo
	Input copies
	Close current memo

Detail mode


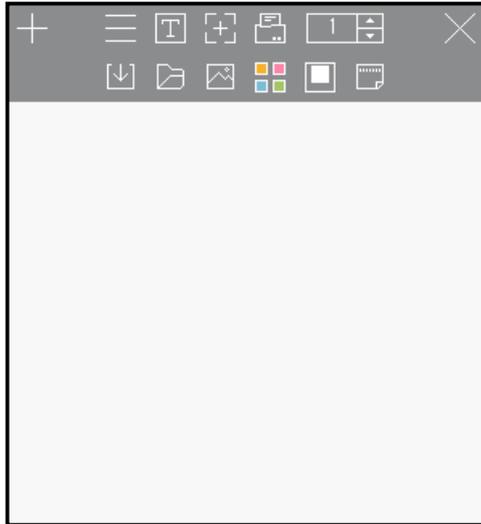


Icon description

-  Save memo
-  Open memo & import template & set settings
-  Add image on memo
-  Change memo color theme
-  Change paper size of memo
-  Change sticky side

- You can change the paper size and the sticky side of memos to be printed.
Also you can save the content of the memos, change color theme, and open settings.

How to make screen captures

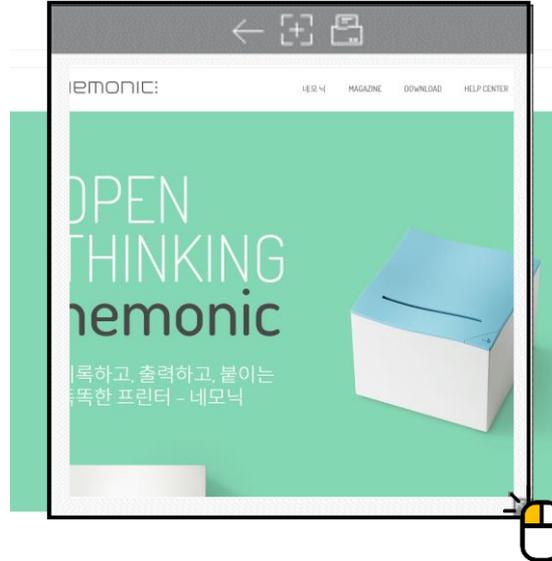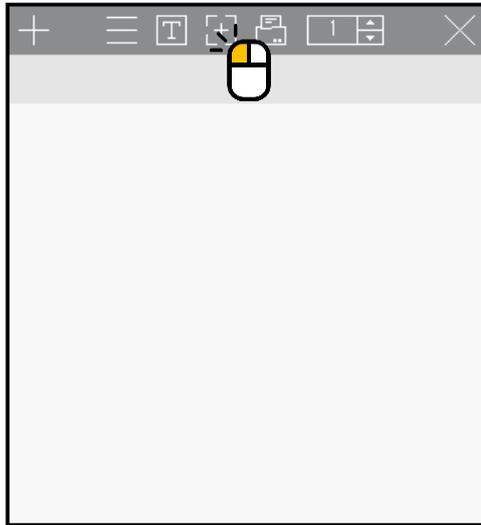

Icon description



Cancel (Switch to default)



Capture current area




Capture current area & print



Adjust size of screen capture area.
(Adjusted according to the paper size proportion)


- 1 Click the  'Capture screen' button on the menu bar.
- 2 Adjust the screen capture area by dragging the icon at bottom right corner.
- 3 Move the window to the screen to capture, click the  'Capture screen' button on the menu bar.
The screenshot will be applied to your current memo.

How to delete a memo & change the name of a memo

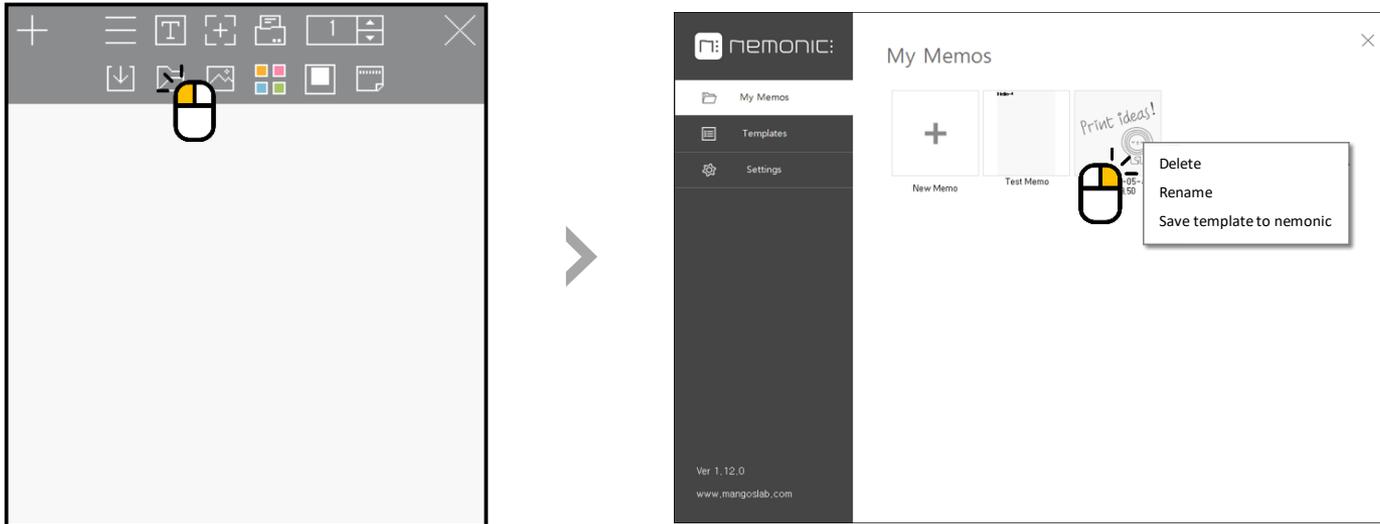


- 1 Press the  **Open memo** button on the [Detail view] mode
- 2 The below menu will appear when right click on the memo
 - Delete
 - Rename
 - Save template to nemonic

Printer template settings - How to set up in My Memo

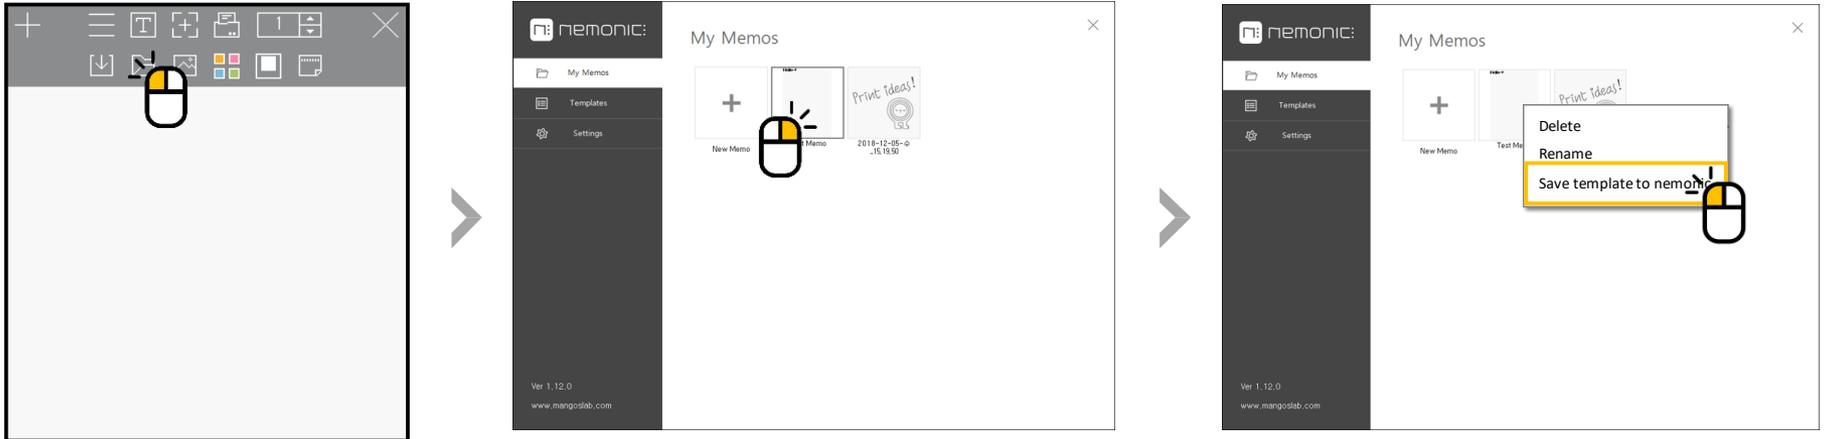


- 1 Press the  **Open memo** button on the [Detail view] mode
- 2 Right click on the memo to set as printer template and click **Save template to nemonic**

Printer template settings - How to set up in Template

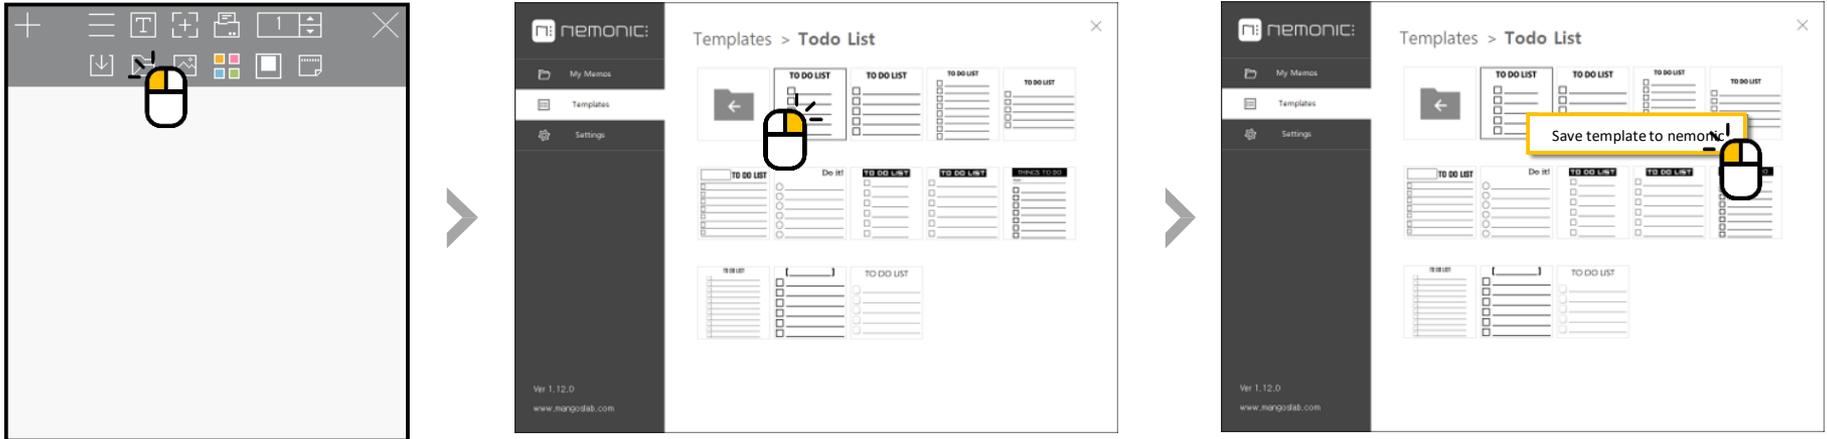

- 1 Press the  **Open memo** button on the [Detail view] mode
- 2 Select Import **Template** from the left menu
- 3 Right click the memo to set as printer template and click **Save template to nemonic**


How to print using another program (ex: Microsoft PowerPoint, Word) - 1

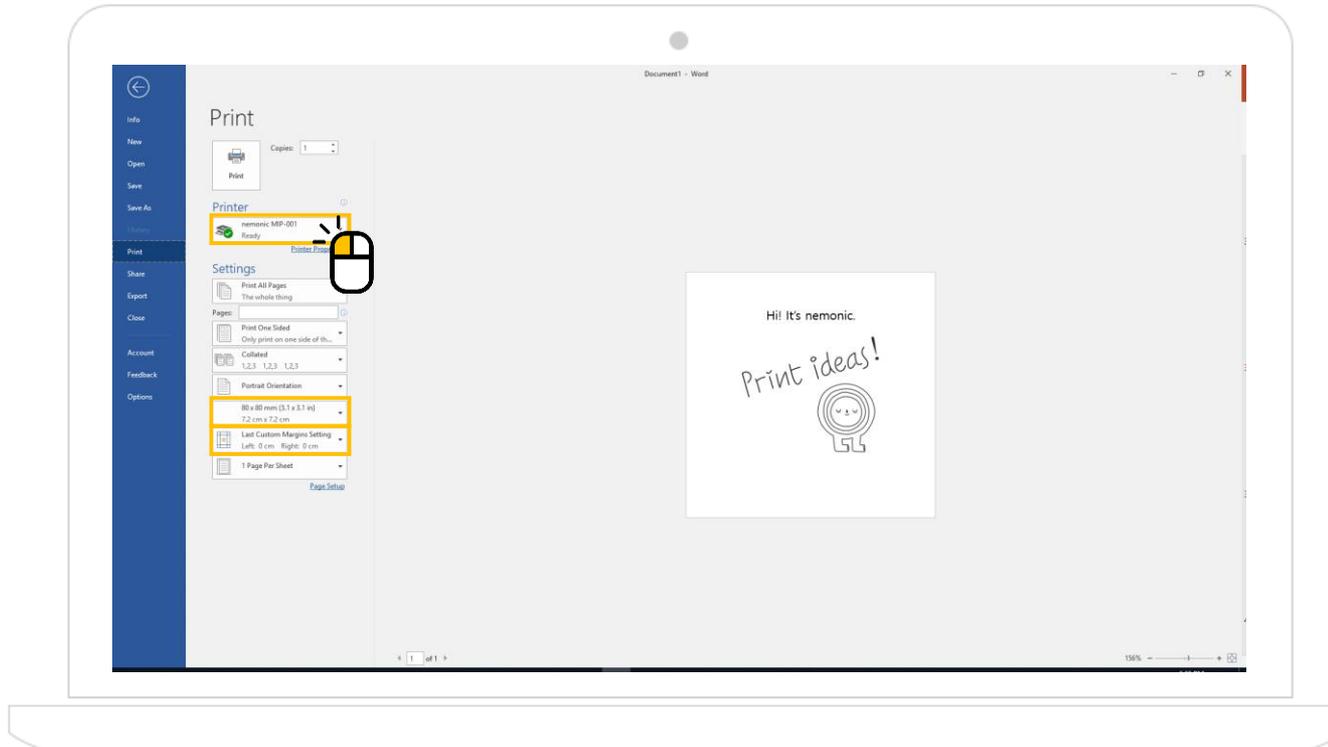

- At the print preview, select nemonic MIP-001 as printer, set paper size as 80x80mm and set all margin to 0. By doing so, you should be able to print correctly.

(Paper size can be changed as the following: 80x80mm, 80x105mm, 80x56mm, 80x136mm)

How to print using another program (ex: Microsoft PowerPoint, Word) - 2

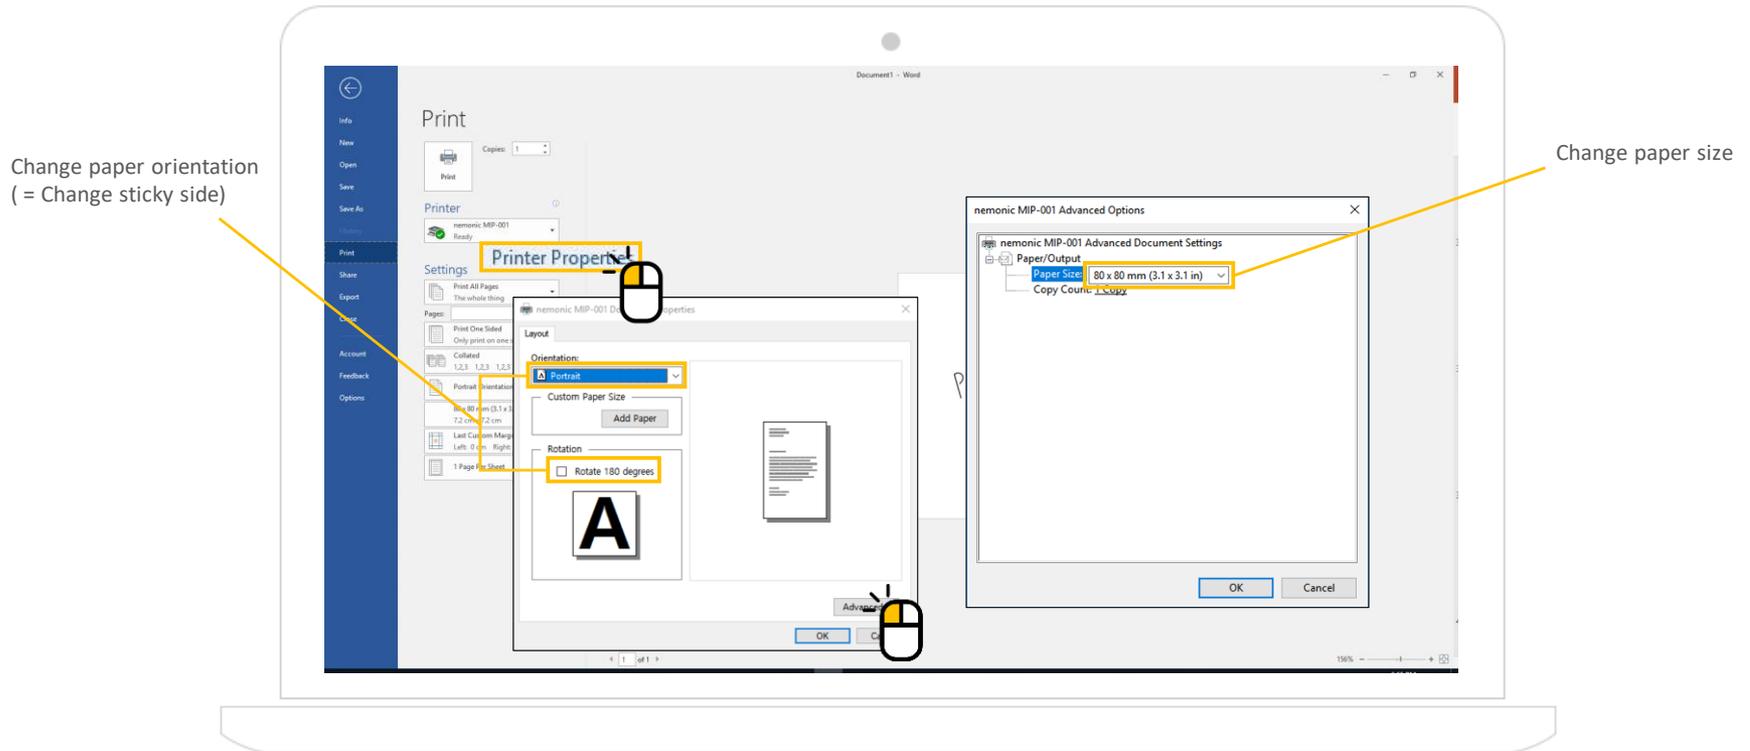

- At the print preview, select nematic MIP-001 as printer, set paper size as 80x80mm and set all margin to 0 and then you can print properly.

(Paper size can be changed as the following: 80x80mm, 80x105mm, 80x56mm, 80x136mm)

FAQ

<http://www.mangoslab.com/n/help-center/?lang=en>

MEMORIC: